

LAB™ INSTRUCTIONS



1. REMOVE INNER BELT



LOCATE KYDEX TOOL

2" INNER:



1.5" INNER:



FOLLOW STEPS TO APPLY MOLLE PANELS TO LAB SYSTEM




2. REMOVE BUCKLE FROM OUTER BELT



FREE END AFTER BUCKLE IS REMOVED

3. TAKE A MOLLE PANEL AND SLIDE TOOL IN SLOT OF PANEL AND IN BETWEEN HOOK SIDE OF BELT. CONTINUE TO SLIDE PANEL INTO POSITION YOU WANT TO ATTACH YOUR GEAR.

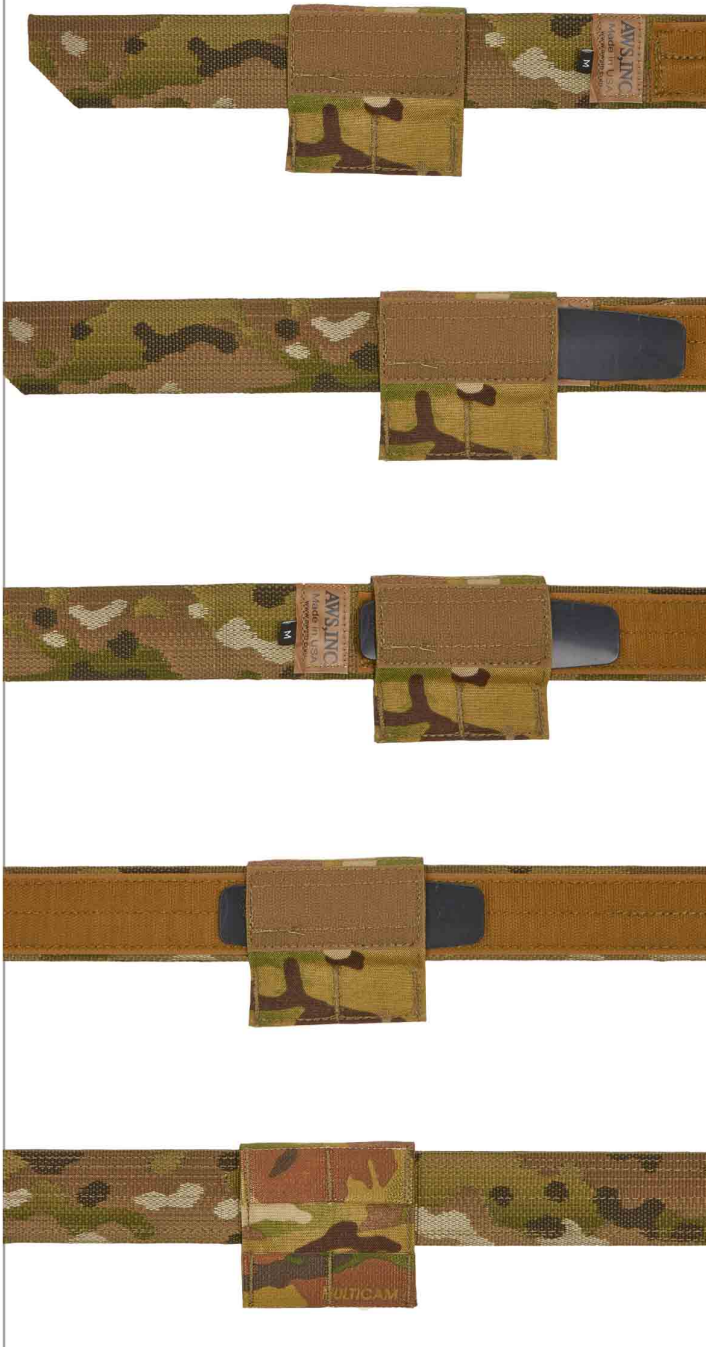

4. ADJUST PANEL PLACEMENT TO YOUR NEEDS



5. ADD BACK INNER BELT. MOLLE PANEL APPLICATION COMPLETE.

